

INSTALLATION INSTRUCTIONS

SIG SAUER P 365

(NEW VERSION WITH WASHERS)



1. Always install only one of the included washers in the spring house of the slide. ATTENTION: The small diameter of the washer must face the spring house. Fig.1



2 . Compress the washer with the opposite side of the recoil rod to ensure that the washer is placed correctly. FIG. 2



3. To install-remove the DPM Recoil System on the pistol frame, follow the same procedure like the factory rod. ATTENTION: Do not lose the washer during the diassembling. FIG. 3



Visit the product's page to watch video instructions.
For any questions about the installation or operating instructions:
service@dpmssystems.com | www.dpmssystems.com