

INSTALLATION INSTRUCTIONS

M&P Shield Beretta PX4 Sub Compact (& Similar)

Important: Open Coil on flange rod

1. Remove the factory guide rod according to the pistol manufacturer's instructions.
2. Place one of the external springs with the open coil facing the flange of the recoil rod (Fig. 1).



Fig. 1

3. Insert the recoil system along with the external spring facing the hole of the slide, guide the external spring and push the rod to pass through the slide hole (Fig. 2) and place the head of the rod to fit in the correct position of the barrel half cycle position (Fig. 3).



Fig. 2

4. Assemble the slide on the frame and rack a few times to confirm that the DPM Recoil Reduction System is installed correctly and the pistol operates unrestricted.

Fig. 3



WARNING: Before proceeding with installation make sure the pistol is unloaded and follow the operating and safety instructions provided by the pistol manufacturer. Remove the Factory Guide Rod according to the pistol manufacturer's instructions. ALWAYS wear eye protection during installation or removal of this item.

For any Questions about the Installation or Operating instructions:
service@dpmssystems.com | www.dpmssystems.com/1911