


Beretta 92X Performance & Open Version 4.9" inch Barrel INSTALLATION INSTRUCTIONS

Also compatible with the previous versions
92-96 Series 4.7" inch Barrel

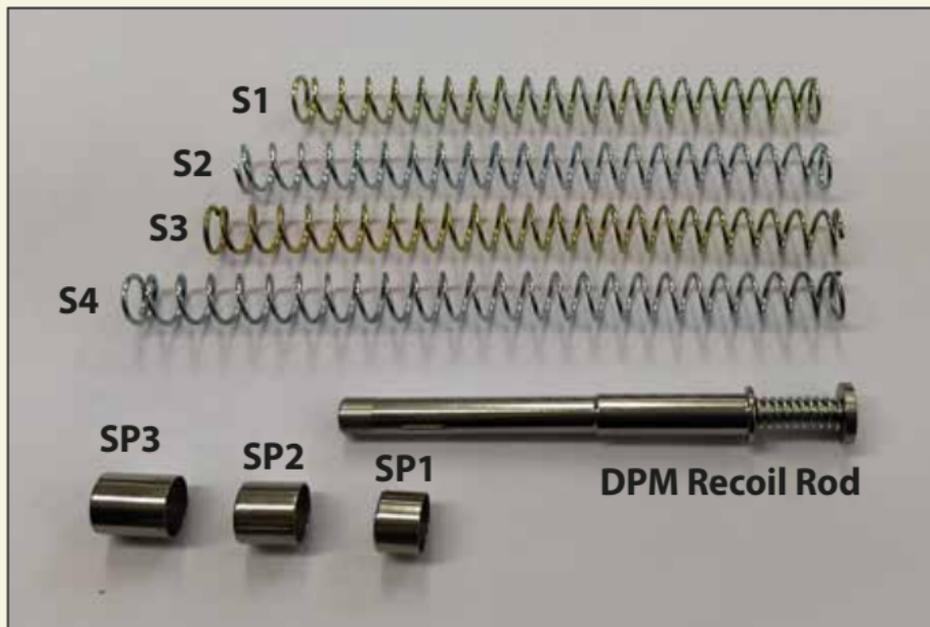

PARTS LIST

1. S1 External Spring Gold Short
2. S2 External Spring Silver Medium
3. S3 External Spring Gold Long
4. S4 External Spring Silver Extra Long
5. SP1 Spring Plug Short
6. SP2 Spring Plug Medium
7. SP3 Spring Plug Long
8. DPM Recoil Rod

1. Remove the factory guide rod according to the pistol manufacturer's instructions. Place one of the external springs S1, S2, S3 or S4 facing the flange of the recoil rod and one of the Spring Plugs of your choice (Fig. 2).



2. Detailed information for the Spring Plugs.
The longer the Spring Plug (Fig. 3), the more power it offers to the DPM Recoil System (slide full open position). For more info about the Power Force Combinations see the included Power Combinations Table.



3. Assemble the slide on the frame and rack a few times to confirm that the DPM Recoil Reduction System is installed correctly and the pistol operates unrestricted.

For any questions about the installation or operating instructions:
service@dpmsystems.com | www.dpmsystems.com