


# DPM RECOIL SYSTEM- GLOCK GENERATION 4

## Instructions for the installation

**ATTENTION:** When you install or remove the recoil system from the pistol use always eye protection glasses.

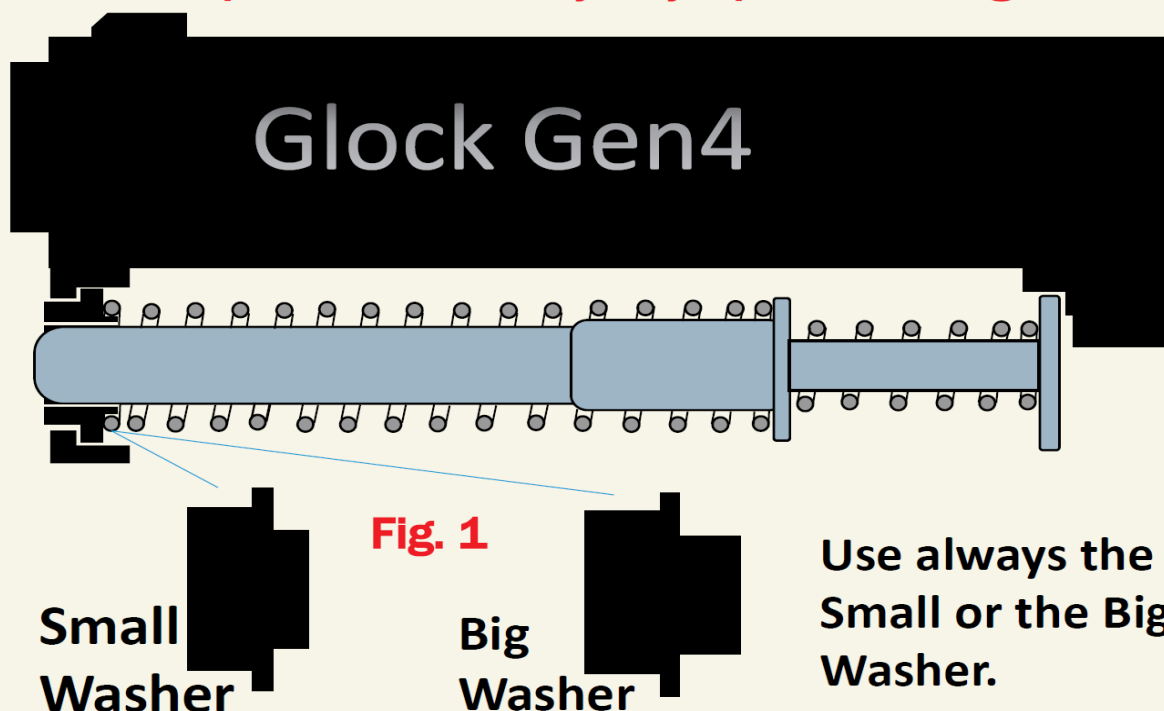

1. Use always **ONLY ONE WASHER** (ring) with the DPM RECOIL ROD.
2. Install one of the two washers with the big diameter side of the slide hole (**Fig. 1**).
3. Install the main spring on the recoil rod, compress the recoil rod with the spring to insert the rod in the washer's hole and push to lock on the correct position of the barrel.
4. Before loading the magazine on the pistol function (open / close) the slide several times to ensure that the DPM Recoil System has been installed correctly and functions unrestricted.

### **Washers Properties (Fig. 1)**

1. We recommend to use the small washer when you use 9 mm factory loads or soft homemade loads.
2. For 40s&w, 357Sig caliber we recommend to use the big washer which will give you a heavier buffer (slide full open position).
3. Washers are responsible only for the buffer force (slide full open position) and the external springs are responsible only for the slide closed position (slide on the battery).