INSTALLATION INSTRUCTIONS 1911 4" Bull Barrel

- 1. Remove the Factory Guide Rod According to the Pistol Manufacturers Instructions.
- 2. Insert the Standard Spring Plug in the Pistol Slide.Next place the DPM Spring Plug behind the Standard Plug.
- 3. Place One External Spring on the DPM Recoil Rod.
- 4. Assemble the Slide on the Frame.
- 5. Rack the gun a few times to check for any unseen interferences and to ensure that the DPM Recoil Reduction System operates unrestricted.

1911 4" Bull Barrel



PLEASE READ CAREFULLY THE INSTALLATION INSTRUCTIONS

6. For easier uninstallation of the DPM System no tool is recommended, only follow the below Figure.



Table of Spring Forces Combination The Springs are Numbered by Length				
	Slide on Closed Battery Position		Force full Rearward Slide Poșition	
Springs	(lbs)	(Kg)	(lbs)	(Kg)
S-1	7.50	3.4	25	11.5
S-2	8.20	3.7	25	11.5
S-3	8.80	4.0	25	11.5

WARNINGS: Before proceeding with installation make sure the pistol is unloaded and follow the operating and safety instructions provided by the pistol manufacturer. Remove the Factory Guide Rod according to the pistol manufacturers instructions. ALWAYS wear eye protection during installation or removal of this item.

For any Questions about the Installation or Operating instructions: service@dpmsystems.com | www.dpmsystems.com/1911

Copyright © 2015 DPM Systems Technologies Ltd.