
 
INSTALLATION INSTRUCTIONS DPM RECOIL SYSTEM WITH BUSHING OR WASHER


- Remove the factory Guide Rod according to the manufacturers instructions.
- 2. Use always the BUSHING/WASHER that is included in the packing with the DPM Rod.
- 3. Insert the BUSHING/WASHER in the slide before the installation of the DPM Rod.
- Finally follow the main instruction to install the DPM Rod.

Before loading the magazine function open and close the slide several times to ensure that the DPM ROD functions unrestricted.

Please look the below examples (Fig 1-6)

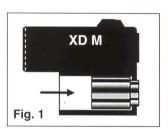




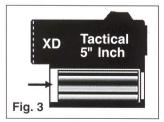







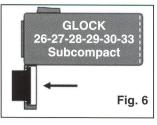

ATTENTION: For some DPM Recoil Rods the included springs are with one open coil and one close. The close coil has to be got into the Rod (Fig 7).





Please follow the above instructions when you install the DPM Rod, Springs and Bushing or the Washer on the rod and use always eye protection glasses.

For any questions about the installation please contact:

service@dpmsystems.com

Copyright © 2010 DPM Systems Technologies Ltd.